

## SAFETY FIRST

If you are collecting the equipment for someone else, please make sure this sheet is given to the equipment user to read. This sheet should be given to the site supervisor if the equipment is being hired for commercial use so that the information is available to all users. Before starting any job, be sure to spend a few minutes planning and understanding the hazards and risks of the activity and determining how you will control them to prevent injury or damage.

## Recommended PPE Equipment:



## Pre-Start Checks and Safety

- Check fuel tank is full.
- NOTE: Uses Diesel.
- Check engine oil and water levels
- Check the RUC is current
- Keep hands, feet and clothing away from all moving parts
- Driver requires Full Class 1 license
- Do not allow passengers to ride on the tray.
- This vehicle has the capacity to carry one passenger who must travel inside the cab.
- Driver and passenger must always wear a seat belt when the vehicle is moving
- Do not leave the truck running while unattended
- Always operate the vehicle while sitting in the driver's seat
- Keep work site area clear at all times
- Always check the worksite before commencing work for hazards (especially underground services)
- Never use in confined areas
- Always use the truck for what it was intended for only and within its specifications
- Do not overload the truck
  - Tray capacity is 2cum
  - GCM is 9,500kg
  - GVM is 5,995kg
  - Tare weight is 2,790kg with driver
  - Max payload on back of truck is 3,200kg
- Always adhere to the road speed limit at all times
- Always follow the NZ road rules
- Drive on the LEFT side of the road at all times

## Safety Features

- Advanced safety systems:
  - Lane departure warning
  - Electronic brake system
  - Electronic Stability Control
- 8" multimedia touchscreen unit with reverse camera
- LED headlights and fog lamps

- Front and rear disc brakes for improved handling and safety
- Driver and passenger airbags
- Reinforced cab meets European (ECE-R29) standards.

## Starting Procedure

- Ensure the gear shift is in the park position
- Insert and turn the key clockwise to start the vehicle.
- Check all surroundings and when clear move the gear shift to drive to drive off.

## When Driving

- Never leave the truck unattended while running
- Hold steering wheel with both hands
- Always adhere to NZ Road Rules and speed limits
- Always drive on the LEFT side of the road
- When reversing use the reversing camera and mirrors to ensure there are no people or obstructions in the way. Use a spotter if necessary

## Loading and Unloading the truck

- DO NOT exceed the Truck's rated capacity.
  - Tray capacity is 2cum
  - GCM is 9,500kg
  - GVM is 5,995kg
  - Tare weight is 2,790kg with driver
  - Max payload on back of truck is 3,200kg
- Ensure the truck's gear shift is in park and the park brake is on before loading and unloading the truck.
- DO NOT raise or tip the tray on sloping ground
- Travel straight up, down or along a gradient, keeping speed to a minimum.
- DO NOT turn across gradients
- DO NOT drive on rough or rutted ground, or across kerbs etc.



- DO NOT discharge load when working on sloping ground.
- Chock all wheels

### **Stopping and After Use**

- When stopped always put the gear shift in park and engage the park brake before exiting the vehicle
- Ensure the truck is on firm level ground and parked in a secure place
- Remove the key and lock the door